


Instruction

Carbon Fiber Abarth 595 Diffuser / FT500-88

1. This product is a replacement so you need remove the original part first.
2. Because of the difference of thickness from OEM plastic part (3mm) and carbon fiber part (1mm) the process which is explained below is necessary to proceed to make thickness.

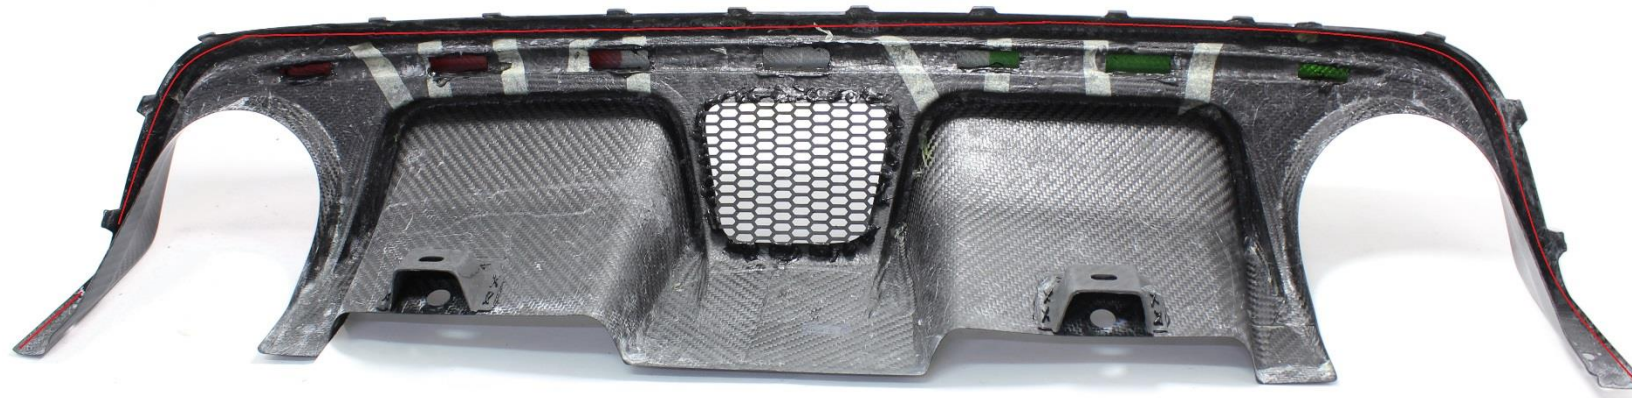

3. The highlighted line at the photo shows that the place you should add biadhesive. Add biadhesive on the highlighted line. The biadhesive should be approximately 2-3mm of thickness. So you will disappear the gap.