


INSTRUCTION

*Abarth 500/595
Sabelt Seat
Cover Shell
FT500-38*


1

This product is a cover that installs on top of OEM shell.

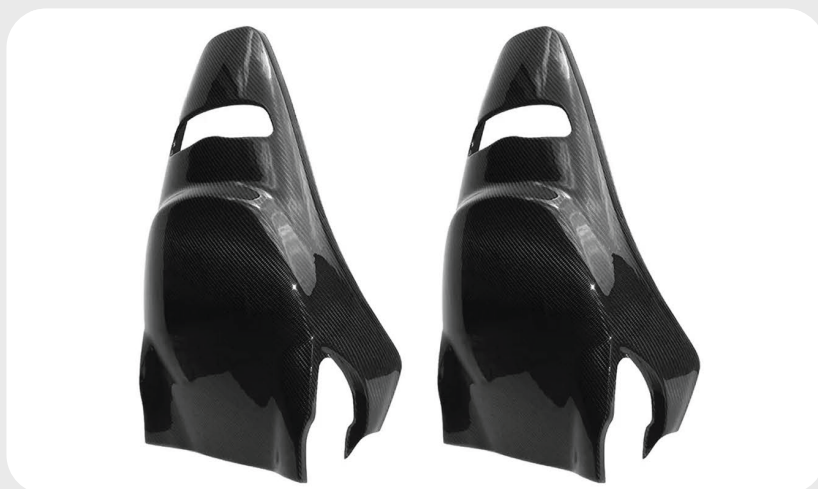

2

Remove 3 screws placed on top of Seat Adjustment Wheel & gently remove leather shell that covers facing part of seat.

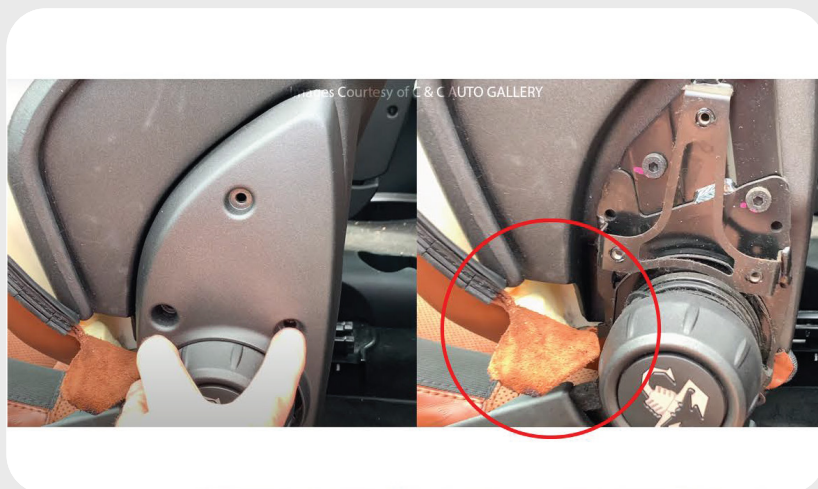

3

After you removed cover of seats you will see a black plastic plate which has 5 screws that need to be loosen in a way to get access to the handle.




INSTRUCTION

*Abarth 500/595
Sabelt Seat
Cover Shell
FT500-38*

4

Handle is secured by a small rotary clip, rotate to release it.

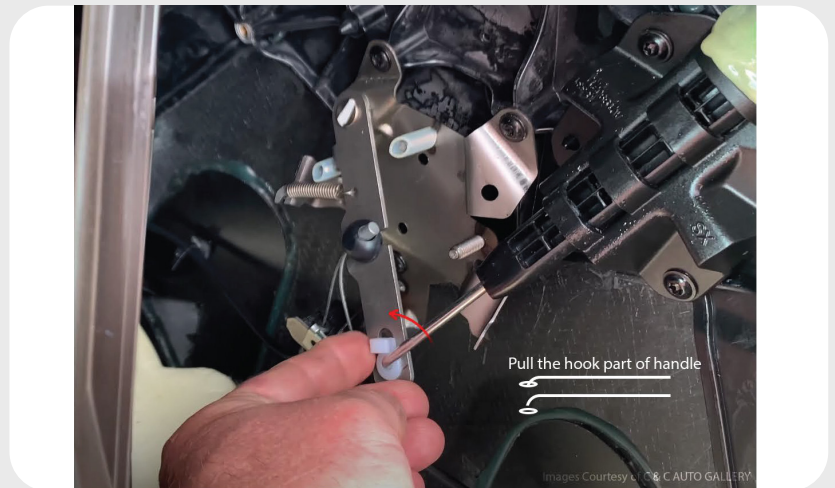

5

Pull the handle to get it removed from the shell.



6

Now that you removed the handle, you can install the Carbon Fiber Cover on top of Shell using Structural Adhesive or Very Thin 3M Double Sided Tape around the edges in small portions.



INSTRUCTION

*Abarth 500/595
Sabelt Seat
Cover Shell
FT500-38*

7

Fix the product in place.
Do the reverse of process to
get everything on place.

